

## Service precautions

Vehicle maintenance is an important yet frequently neglected item. Proper maintenance will aid in retaining the level of performance that has been engineered into your Mitsubishi vehicle and it will guard against major repair expenses resulting from neglect. Good maintenance is a great way to protect your investment and ensure proper performance.

Your Mitsubishi Motors Dealership is in the best position to provide proper maintenance service through Mitsubishi's exclusive "Triple Diamond Service".

- Factory Trained Technicians
- Advanced Diagnostic Equipment
- Quality Workmanship
- Mitsubishi Genuine parts
- Mitsubishi Authorized Accessories
- Competitive Prices
- Fast Service
- Commitment to Customer Satisfaction

## Selecting the proper maintenance schedule

There are two maintenance schedules that show proper service for your vehicle.

First is "**Regular maintenance schedule**".

Follow the Regular maintenance schedule only if none of the driving conditions in the Severe maintenance section apply.

Second is "**Severe maintenance schedule**".

Follow the severe maintenance schedule only if your vehicle is frequently driven under one or more of the following road conditions.

- Driving on dusty, rough, muddy or salt-spread roads
- Towing or police, taxi or commercial operation
- Extensive idling and /or low speed operation
- Repeated short-trip operation at freezing temperatures (engine not thoroughly warmed up)
- Extended use of brakes while driving
- Driving in sandy areas
- More than 50% operation in heavy city traffic during hot weather above 90°F (32°C)

### CALIFORNIA, MASSACHUSETTS, VERMONT and MAINE ONLY:

Regular maintenance schedules; replace timing belt, balancer belt (if equipped on your vehicle) at 60,000 mile intervals.

This maintenance is recommended but is not required to maintain the emissions warranty.

### FEDERAL:

Regular maintenance schedules; check fuel hoses condition, check and service exhaust system at 30,000 mile intervals.

These are recommended but are not required to maintain the emission warranty.

## Emission control system maintenance

The "scheduled" maintenance services, listed in **bold type** must be done at the times or mileages specified to assure the continued proper functioning of the emission control system. These, and all other maintenance services included in this manual, should be done to provide best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions such as dusty areas and very short trip driving. Inspection and service also should be done any time malfunction is suspected.

## Service station checks

The following items should be inspected by either you or a service station attendant each time fuel is added:

- Engine oil level. Add if needed. Check Owner's Manual-See index and look under Engine Oil for detailed information.
- Engine coolant level. Add coolant to reservoir tank along with the proper mix if needed. Replace coolant if dirty or rusty in color. Check Owner's Manual-See index and look under Coolant for detailed information.
- Windshield washer fluid level. Add fluid to washer tank if necessary.
- Tire inspection. Inspect for unusual tire wear and proper inflation. Check Owner's Manual-See index and look under Tire for detailed information.

## Regular Maintenance Schedule

Enter Your Original In-Service Date Here:

--	--	--

Month

Day

Year

Original In-Service Date

### Regular maintenance schedule

The content and mileage interval can vary depending on model.

Mileage or Time-Whichever occurs first

#### ● 7,500 Miles (12,000km) or at 6 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

#### ● 15,000 Miles (24,000km) or at 12 months

- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

#### ● 22,500 Miles (36,000km) or at 18 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

32

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

#### ● 30,000 Miles (48,000km) or at 24 months

- Check fuel hoses condition.\***  
\*:This maintenance is recommended but is not required to maintain the emissions warranty.
- Replace air cleaner filter.**
- Replace spark plugs, standard type.**
- Inspect and adjust intake and exhaust valve clearance.**  
**If valve noise increases, adjust valve clearance.**  
**(4G6-MIVEC engine only)**
- Check drive belts condition (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields). \***
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle/transmission oil level and condition.
- Check automatic transaxle/transmission fluid level and condition.
- Check transfer oil level.
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.

- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

33

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 37,500 Miles (60,000km) or at 30 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 52,500 Miles (84,000km) or at 42 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 45,000 Miles (72,000km) or at 36 months

- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

34

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 60,000 Miles (96,000km) or at 48 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs, standard type.
- Replace spark plugs, platinum-tipped type.
- Replace ignition cables.
- Check distributor cap and rotor.
- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance. (4G6-MIVEC engine only)
- Replace timing belt. \*  
\*:For California, Massachusetts, Vermont and Maine, this maintenance is recommended but is not required to maintain the emissions warranty.
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).

- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle/transmission oil level and condition.
- Check automatic transaxle/transmission fluid level and condition.
- Check transfer oil level (Montero and Montero Sport-4WD).
- Change transfer oil (except Montero and Montero Sport-4WD).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.

35

## Regular Maintenance Schedule

- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

### ● 67,500 Miles (108,000km) or at 54 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 75,000 Miles (120,000km) or at 60 months

- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 82,500 Miles (132,000km) or at 66 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

36

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 90,000 Miles (144,000km) or at 72 months

- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance.  
(4G6-MIVEC engine only)
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle/transmission oil level and condition.
- Check automatic transaxle/transmission fluid level and condition.
- Check transfer oil level.
- Change engine coolant.
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.

- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

37

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 97,500 Miles (156,000km) or at 78 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 105,000 Miles (168,000km) or at 84 months

- Replace spark plugs, iridium-tipped type.
- Replace timing belt. \*  
\*:This maintenance is not required if previously replaced.
- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

38

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 112,500 Miles (180,000km) or at 90 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 120,000 Miles (192,000km) or at 96 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs, standard type.
- Replace spark plugs, platinum-tipped type.
- Replace ignition cables.
- Check distributor cap and rotor.

- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance. (4G6-MIVEC engine only)
- Replace timing belt. \*  
\*:In case of replaced at 60miles/48months
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle/transmission oil level and condition.
- Check automatic transaxle/transmission fluid level and condition.
- Check transfer oil level (Montero and Montero Sport-4WD).
- Change transfer oil (except Montero and Montero Sport-4WD).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.

39

## Regular Maintenance Schedule

- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● at 120 months

- Inspect SRS\* airbag system.  
\*: Supplemental Restraint System

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

40

## Severe Maintenance Schedule

### Severe maintenance schedule

The content and mileage interval can vary depending on model.

Mileage or Time-Whichever occurs first

#### ● 3,750 Miles (6,000km) or at 3 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

#### ● 7,500 Miles (12,000km) or at 6 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

#### ● 11,250 Miles (18,000km) or at 9 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 15,000 Miles (24,000km) or at 12 months

- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 18,750 Miles (30,000km) or at 15 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 22,500 Miles (36,000km) or at 18 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

42

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 26,250 Miles (42,000km) or at 21 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 30,000 Miles (48,000km) or at 24 months

- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance.  
(4G6-MIVEC engine only)
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.

- Change manual transaxle/transmission oil.
- Change automatic transaxle/transmission fluid.
- Change transfer oil (Montero and Montero Sport-4WD).
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

43

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 33,750 Miles (54,000km) or at 27 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 37,500 Miles (60,000km) or at 30 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 41,250 Miles (66,000km) or at 33 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

44

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 45,000 Miles (72,000km) or at 36 months

- Replace air cleaner filter.**
- Replace spark plugs, standard type.**
- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 48,750 Miles (78,000km) or at 39 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 52,500 Miles (84,000km) or at 42 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

45



## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 56,250 Miles (90,000km) or at 45 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 60,000 Miles (96,000km) or at 48 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs, standard type.
- Replace spark plugs, platinum-tipped type.
- Replace ignition cables.
- Check distributor cap and rotor.
- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance.  
(4G6-MIVEC engine only)
- Replace timing belt.
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.

46

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 63,750 Miles (102,000km) or at 51 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 67,500 Miles (108,000km) or at 54 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- Replace engine oil filter.
- Change manual transaxle/transmission oil.
- Change automatic transaxle/transmission fluid.
- Change transfer oil.
- Change engine coolant.
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

47

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 71,250 Miles (114,000km) or at 57 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 75,000 Miles (120,000km) or at 60 months

- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

48

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 78,750 Miles (126,000km) or at 63 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 86,250 Miles (138,000km) or at 69 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 82,500 Miles (132,000km) or at 66 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 90,000 Miles (144,000km) or at 72 months

- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Inspect and adjust intake and exhaust valve clearance.  
If valve noise increases, adjust valve clearance.  
(4G6-MIVEC engine only)
- Check drive belts condition (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle/transmission oil.

49

## Severe Maintenance Schedule

- Change automatic transaxle/transmission fluid.
- Change transfer oil (Montero and Montero Sport-4WD).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

### ● 93,750 Miles (150,000km) or at 75 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 97,500 Miles (156,000km) or at 78 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

50

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 101,250 Miles (162,000km) or at 81 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 105,000 Miles (168,000km) or at 84 months

- Replace air cleaner filter.
- Replace spark plugs, standard type.
- Replace spark plugs, iridium-tipped type.
- Change engine oil.
- Replace engine oil filter.
- Check automatic transaxle/transmission fluid level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

51

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 108,750 Miles (174,000km) or at 87 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 112,500 Miles (180,000km) or at 90 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 116,250 Miles (186,000km) or at 93 months

- Change engine oil.
- Replace engine oil filter.
- Rotate tires.
- Inspect air purifier filter for clogging (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

52

## Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 120,000 Miles (192,000km) or at 96 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
- Replace spark plugs, standard type.**
- Replace spark plugs, platinum-tipped type.**
- Replace ignition cables.**
- Check distributor cap and rotor.**
- Inspect and adjust intake and exhaust valve clearance.**  
If valve noise increases, adjust valve clearance.  
(4G6-MIVEC engine only)
- Replace timing belt.**
- Check drive belts condition (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.

- Replace engine oil filter.
- Change manual transaxle/transmission oil.
- Change automatic transaxle/transmission fluid.
- Change transfer oil.
- Change engine coolant.
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders (except vehicles with disc brakes) for wear and leaks of all wheels.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Lubricate ball joints with grease nipple.
- Inspect suspension system for looseness and damage.
- Change rear axle oil, with Limited Slip Diff.
- Check rear axle oil level, without Limited Slip Diff.
- Lubricate propeller shaft joints with grease nipple.
- Rotate tires.
- Replace air purifier filter (if so equipped).

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

53

