

### Service precautions

Vehicle maintenance is an important yet frequently neglected item. Proper maintenance will aid in retaining the level of performance that has been engineered into your Mitsubishi vehicle and it will guard against major repair expenses resulting from neglect. Good maintenance is a great way to protect your investment and ensure proper performance.

Your Mitsubishi Motors Dealership is in the best position to provide proper maintenance service through Mitsubishi's exclusive "Diamond Care Service".

- Factory Trained Technicians
- Advanced Diagnostic Equipment
- Quality Workmanship
- Mitsubishi Genuine parts
- Mitsubishi Authorized Accessories
- Competitive Prices
- Fast Service
- Commitment to Customer Satisfaction

2005 MODEL YEAR TURBO CHARGED  
VEHICLE MAINTENANCE

### Selecting the proper maintenance schedule

There are two maintenance schedules that show proper service for your vehicle.

Regardless of which maintenance schedule you follow, the use of fully synthetic motor oil is required. See "Engine Oil and Filter" in the Owner's Manual for details on motor oil requirements.

First is "**Regular maintenance schedule**".

Follow the Regular maintenance schedule only if none of the driving conditions in the Severe maintenance section apply.

Second is "**Severe maintenance schedule**".

Follow the severe maintenance schedule only if your vehicle is frequently driven under one or more of the following road conditions.

- Driving on dusty, rough, muddy or salt-spread roads
- Towing or police, taxi or commercial operation
- Extensive idling and /or low speed operation
- Repeated short-trip operation at freezing temperatures (engine not thoroughly warmed up)
- Extended use of brakes while driving
- Driving in sandy areas
- More than 50% operation in heavy city traffic during hot weather above 90°F (32°C)

CALIFORNIA, MASSACHUSETTS, VERMONT and MAINE ONLY:

Regular maintenance schedules; replace air cleaner filter at 15,000 mile intervals and replace timing belt, balancer belt (if equipped on your vehicle) at 60,000 mile intervals. These are recommended but are not required to maintain the emissions warranty.

FEDERAL:

Regular maintenance schedules; check fuel system for leaks, check fuel hoses condition, check and service exhaust system at 30,000 mile intervals.

These are recommended but are not required to maintain the emission warranty.

## Emission control system maintenance

The “scheduled” maintenance services, listed in **bold type** must be done at the times or mileages specified to assure the continued proper functioning of the emission control system. These, and all other maintenance services included in this manual, should be done to provide the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions such as dusty areas and very short trip driving. Inspection and service also should be done any time a malfunction is suspected.

## Service station checks

The following items should be inspected by either you or a service station attendant each time fuel is added:

- Engine oil level. Add if needed. Check Owner’s Manual-See index and look under “Engine Oil” for detailed information.
- Engine coolant level. Add coolant to reservoir tank along with the proper mix if needed. Replace coolant if dirty or rusty in color. Check Owner’s Manual-See index and look under “Coolant” for detailed information.
- Windshield washer fluid level. Add fluid to washer tank if necessary.
- Tire inspection. Inspect for unusual tire wear and proper inflation. Check Owner’s Manual-See index and look under “Tire” for detailed information.

## Regular Maintenance Schedule

Enter Your Original In-Service Date Here:

--	--	--

Month

Day

Year

Original In-Service Date

### Regular maintenance schedule

Mileage or Time-Whichever occurs first

#### ● 5,000 Miles (8,000km) or at 5 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

#### ● 10,000 Miles (16,000km) or at 10 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

**● 15,000 Miles (24,000km) or at 15 months**

- Replace air cleaner filter.** \*1

\*1For California,Massachusetts,Vermont and Maine, this maintenance is recommended but is not required to maintain the emissions warranty.

- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level and condition.
- Check transfer oil level.
- Check reserve tank fluid level (for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 20,000 Miles (32,000km) or at 20 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 25,000 Miles (40,000km) or at 25 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 30,000 Miles (48,000km) or at 30 months

- Check fuel system for leaks \*2  
(tank, pipe line and connection, and fuel tank filler tube cap).

\*2 This maintenance is recommended but is not required to maintain the emissions warranty.

- Check fuel hoses condition. \*2
- Replace air cleaner filter.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system \*2  
(connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level  
(for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.

- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 35,000 Miles (56,000km) or at 35 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **40,000 Miles (64,000km) or at 40 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **45,000 Miles (72,000km) or at 45 months**

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level and condition.
- Check transfer oil level.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 50,000 Miles (80,000km) or at 50 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 55,000 Miles (88,000km) or at 55 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 60,000 Miles (96,000km) or at 60 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs, iridium-tipped type.
- Replace timing belt \*<sup>1</sup>

\*<sup>1</sup> For California, Massachusetts, Vermont and Maine, this maintenance is recommended but is not required to maintain the emissions warranty.

- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.

# Regular Maintenance Schedule

- Replace coolant hoses.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

- **65,000 Miles (104,000km) or at 65 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **70,000 Miles (112,000km) or at 70 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #



## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 75,000 Miles (120,000km) or at 75 months

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level and condition.
- Check transfer oil level.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 80,000 Miles (128,000km) or at 80 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 85,000 Miles (136,000km) or at 85 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

# Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

- **90,000 Miles (144,000km) or at 90 months**
- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system(connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.

- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **95,000 Miles (152,000km) or at 95 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

### ● 100,000 Miles (160,000km) or at 100 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 105,000 Miles (168,000km) or at 105 months

- Replace air cleaner filter.
- Replace timing belt. \*<sup>3</sup>
  - \*<sup>3</sup> This maintenance is not required if previously replaced.
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level and condition.
- Check transfer oil level.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

**● 110,000 Miles (176,000km) or at 110 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 115,000 Miles (184,000km) or at 115 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 120,000 Miles (192,000km) or at 120 months**

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs,iridium-tipped type.
- Replace timing belt \*4  
\*4 In case of replaced at 60,000 miles/60 months.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.

## Regular Maintenance Schedule

- Replace coolant hoses.  
(radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

### ● at 120 months

- Inspect SRS \*<sup>5</sup> airbag system.

\*<sup>5</sup> : Supplemental Restraint System

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 125,000 Miles (200,000km) or at 125 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 130,000 Miles (208,000km) or at 130 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

**● 135,000 Miles (216,000km) or at 135 months**

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level and condition.
- Check transfer oil level.
- Check reserve tank fluid level (for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 140,000 Miles (224,000km) or at 140 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**● 145,000 Miles (232,000km) or at 145 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

- **150,000 Miles (240,000km) or at 150 months**
- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system(connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.

- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

**Severe maintenance schedule**

Mileage or Time-Whichever occurs first

● **3,750 Miles (6,000km) or at 4 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **7,500 Miles (12,000km) or at 8 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **11,250 Miles (18,000km) or at 12 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #



## Severe maintenance schedule

Mileage or Time-Whichever occurs first

### ● 15,000 Miles (24,000km) or at 16 months

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 18,750 Miles (30,000km) or at 20 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 22,500 Miles (36,000km) or at 24 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **26,250 Miles (42,000km) or at 28 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **30,000 Miles (48,000km) or at 32 months**

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.

## Severe maintenance schedule

- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

### ● 33,750 Miles (54,000km) or at 36 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 37,500 Miles (60,000km) or at 40 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 41,250 Miles (66,000km) or at 44 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **45,000 Miles (72,000km) or at 48 months**

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **48,750 Miles (78,000km) or at 52 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **52,500 Miles (84,000km) or at 56 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Severe maintenance schedule

Mileage or Time-Whichever occurs first

### ● 56,250 Miles (90,000km) or at 60 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 60,000 Miles (96,000km) or at 64 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
- Replace spark plugs,iridium-tipped type.**
- Replace timing belt.**
- Replace drive belts (for the generator, water pump, power steering pump).**

### **Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**

- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Replace coolant hoses. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **63,750 Miles (102,000km) or at 68 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **67,500 Miles (108,000km) or at 72 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **71,250 Miles (114,000km) or at 76 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Severe maintenance schedule

Mileage or Time-Whichever occurs first

### ● 75,000 Miles (120,000km) or at 80 months

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 78,750 Miles (126,000km) or at 84 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 82,500 Miles (132,000km) or at 88 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **86,250 Miles (138,000km) or at 92 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **90,000 Miles (144,000km) or at 96 months**

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.



## Severe maintenance schedule

- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

### ● 93,750 Miles (150,000km) or at 100 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 97,500 Miles (156,000km) or at 104 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 101,250 Miles (162,000km) or at 108 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **105,000 Miles (168,000km) or at 112 months**

- Replace air cleaner filter.**
- Replace timing belt.**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **108,750 Miles (174,000km) or at 116 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **112,500 Miles (180,000km) or at 120 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Severe maintenance schedule

Mileage or Time-Whichever occurs first

### ● at 120 months

- Inspect SRS \*<sup>5</sup> airbag system.

\*<sup>5</sup> : Supplemental Restraint System

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 116,250 Miles (186,000km) or at 124 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 120,000 Miles (192,000km) or at 128 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).
- Replace spark plugs, iridium-tipped type.
- Replace timing belt.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Replace coolant hoses. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.

## Severe maintenance schedule

- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

- **123,750 Miles (198,000km) or at 132 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **127,500 Miles (204,000km) or at 136 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **131,250 Miles (210,000km) or at 140 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

## Severe maintenance schedule

Mileage or Time-Whichever occurs first

### ● 135,000 Miles (216,000km) or at 144 months

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level  
(for Active Center Differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 138,750 Miles (222,000km) or at 148 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

### ● 142,500 Miles (228,000km) or at 152 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **146,250 Miles (234,000km) or at 156 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **150,000 Miles (240,000km) or at 160 months**

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.

- Change manual transaxle oil.
- Change transfer oil.
- Check reserve tank fluid level (for Active Center Differential).
- Change engine coolant.
- Inspect coolant hoses condition. (radiator hose, heater hose)
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #