

Service precautions

Vehicle maintenance is an important yet frequently neglected item. Proper maintenance will aid in retaining the level of performance that has been engineered into your Mitsubishi vehicle and it will guard against major repair expenses resulting from neglect. Good maintenance is necessary to protect your investment and ensure proper performance.

Your Mitsubishi Motors Dealership is in the best position to provide proper maintenance service through Mitsubishi's exclusive "Triple Diamond Service".

- Factory Trained Technicians
- Advanced Diagnostic Equipment
- Quality Workmanship
- Mitsubishi Genuine parts
- Mitsubishi Authorized Accessories
- Competitive Prices
- Fast Service
- Commitment to Customer Satisfaction

Selecting the proper maintenance schedule

There are two maintenance schedules that show proper service for your vehicle.

First is "**Regular maintenance schedule**".

Follow the Regular maintenance schedule only if none of the driving conditions in the Severe maintenance section apply.

Second is "**Severe maintenance schedule**".

Follow the severe maintenance schedule only if your vehicle is frequently driven under one or more of the following road conditions.

- Driving on dusty, rough, muddy or salt-spread roads
- Police, taxi or commercial operation
- Extended use of brakes while driving
- Driving in sandy areas
- More than 50 % operation in heavy city traffic during hot weather above 90 °F (32 °C)

Regular Maintenance Schedule

Enter Your Original In-Service Date Here:

--	--	--

Month

Day

Year

Original In-Service Date

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 15,000 Miles (24,000 km) or at 12 months

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 12 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 30,000 Miles (48,000 km) or at 24 months

- Check transmission oil level and condition.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

● **45,000 Miles (72,000 km) or at 36 months**

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **36 Months**

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **60,000 Miles (96,000 km) or at 48 months**

- Check transmission oil level and condition.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

● 75,000 Miles (120,000 km) or at 60 months

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 60 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 90,000 Miles (144,000 km) or at 72 months

- Check transmission oil level and condition.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **105,000 Miles (168,000 km) or at 84 months**

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **84 Months**

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **120,000 Miles (192,000 km) or at 96 months**

- Check transmission oil level and condition.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.

- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **135,000 Miles (216,000 km) or at 108 months**

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular Maintenance Schedule

Mileage or Time-Whichever occurs first

● 108 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 150,000 Miles (240,000 km) or at 120 months

- Check transmission oil level and condition.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 240 Months

- Change motor coolant.
- Change heater fluid.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● **3,750 Miles (6,000 km) or at 3 months**

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **7,500 Miles (12,000 km) or at 6 months**

- Inspect disc brake pads and rotors for wear.
 Inspect suspension system for looseness and damage.
 Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **11,250 Miles (18,000 km) or at 9 months**

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **15,000 Miles (24,000 km) or at 12 months**

- Check transmission oil level and condition.
 Inspect disc brake pads and rotors for wear.
 Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
 Check brake hoses for deterioration or leaks.
 Inspect drive shaft boots for grease leaks and damage.
 Inspect suspension system for looseness and damage.
 Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **12 Months**

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **18,750 Miles (30,000 km) or at 15 months**

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 22,500 Miles (36,000 km) or at 18 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 26,250 Miles (42,000 km) or at 21 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 30,000 Miles (48,000 km) or at 24 months

- Change transmission oil.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.

- Inspect ball joint and steering linkage seals for grease leaks and damage.

- Inspect drive shaft boots for grease leaks and damage.

- Inspect suspension system for looseness and damage.

- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 33,750 Miles (54,000 km) or at 27 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 37,500 Miles (60,000 km) or at 30 months

- Inspect disc brake pads and rotors for wear.

- Inspect suspension system for looseness and damage.

- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 41,250 Miles (66,000 km) or at 33 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 45,000 Miles (72,000 km) or at 36 months

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 36 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 48,750 Miles (78,000 km) or at 39 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 52,500 Miles (84,000 km) or at 42 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 56,250 Miles (90,000 km) or at 45 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 60,000 Miles (96,000 km) or at 48 months

- Change transmission oil.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 63,750 Miles (102,000 km) or at 51 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 67,500 Miles (108,000 km) or at 54 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 71,250 Miles (114,000 km) or at 57 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 75,000 Miles (120,000 km) or at 60 months

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 60 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 78,750 Miles (126,000 km) or at 63 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 82,500 Miles (132,000 km) or at 66 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 86,250 Miles (138,000 km) or at 69 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 90,000 Miles (144,000 km) or at 72 months

- Change transmission oil.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 93,750 Miles (150,000 km) or at 75 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 97,500 Miles (156,000 km) or at 78 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 101,250 Miles (162,000 km) or at 81 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 105,000 Miles (168,000 km) or at 84 months

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 84 Months

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 108,750 Miles (174,000 km) or at 87 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 112,500 Miles (180,000 km) or at 90 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 116,250 Miles (186,000 km) or at 93 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 120,000 Miles (192,000 km) or at 96 months

- Change transmission oil.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 123,750 Miles (198,000 km) or at 99 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 127,500 Miles (204,000 km) or at 102 months

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 131,250 Miles (210,000 km) or at 105 months

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● **135,000 Miles (216,000 km) or at 108 months**

- Check transmission oil level and condition.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Change brake fluid.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **108 Months**

- Check Main Drive Lithium-ion Battery for capacity.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **138,750 Miles (222,000 km) or at 111 months**

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **142,500 Miles (228,000 km) or at 114 months**

- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **146,250 Miles (234,000 km) or at 117 months**

- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe Maintenance Schedule

Mileage or Time-Whichever occurs first

● 150,000 Miles (240,000 km) or at 120 months

- Change transmission oil.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect high voltage wire for looseness and damage.
- Inspect disc brake pads and rotors for wear.
- Inspect rear drum brake linings and rear wheel cylinders for wear and leaks.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 240 Months

- Change motor coolant.
- Change heater fluid.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #



DIAMOND CARE™ PROTECTION PLAN

Have you purchased the Mitsubishi Diamond Care Protection Plan? The Plan supplements your new vehicle warranties. See your authorized Mitsubishi dealer for details.

