

Service precautions

Vehicle maintenance is an important yet frequently neglected item. Proper maintenance will aid in retaining the level of performance that has been engineered into your Mitsubishi vehicle and it will guard against major repair expenses resulting from neglect. Good maintenance is a necessary way to protect your investment and ensure proper performance.

Your Mitsubishi Motors Dealership is in the best position to provide proper maintenance service through Mitsubishi's exclusive "Diamond Care Service".

- Factory Trained Technicians
- Advanced Diagnostic Equipment
- Quality Workmanship
- Mitsubishi Genuine parts
- Mitsubishi Authorized Accessories
- Competitive Prices
- Fast Service
- Commitment to Customer Satisfaction

2012 MODEL YEAR TURBO
CHARGED VEHICLE MAINTENANCE

Selecting the proper maintenance schedule

There are two maintenance schedules that show proper service for your vehicle.

First is "**Regular maintenance schedule**".

Follow the Regular maintenance schedule only if none of the driving conditions in the Severe maintenance section apply.

Second is "**Severe maintenance schedule**".

Follow the severe maintenance schedule only if your vehicle is frequently driven under one or more of the following road conditions.

- Driving on dusty, rough, muddy or salt-spread roads
- Towing or police, taxi or commercial operation
- Extensive idling and /or low speed operation
- Repeated short-trip operation at freezing temperatures (engine not thoroughly warmed up)
- Extended use of brakes while driving
- Driving in sandy areas
- More than 50% operation in heavy city traffic during hot weather above 90°F (32°C)

Emission control system maintenance

The “scheduled” maintenance services, listed in **bold type** must be done at the times or mileages specified to assure the continued proper functioning of the emission control system. These, and all other maintenance services included in this manual, should be done to provide the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions such as dusty areas and very short trip driving. Inspection and service also should be done any time a malfunction is suspected.

Service station checks

The following items should be inspected by either you or a service station attendant each time fuel is added:

- Engine oil level. Add if needed. Check Owner’s Manual-See index and look under “Engine Oil” for detailed information.
- Engine coolant level. Add coolant to reservoir tank along with the proper mix if needed. Replace coolant if dirty or rusty in color. Check Owner’s Manual-See index and look under “Coolant” for detailed information.
- Windshield washer fluid level. Add fluid to washer tank if necessary.
- Tire inspection. Inspect for unusual tire wear and proper inflation. Check Owner’s Manual-See index and look under “Tire” for detailed information.

Regular maintenance schedule

Enter Your Original In-Service Date Here:

--	--	--

Month

Day

Year

Original In-Service Date

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 3,000 Miles (5,000 km) or at 6 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 6,000 Miles (10,000 km) or at 12 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 9,000 Miles (15,000 km) or at 18 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **12,000 Miles (20,000 km) or at 24 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **15,000 Miles (25,000 km) or at 30 months**

- Replace air cleaner filter.** *¹

*¹ This maintenance is recommended but is not required to maintain the emissions warranty.

- Change engine oil.
- Check manual transaxle oil level.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Check transfer oil level.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.

- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **18,000 Miles (30,000 km) or at 36 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 21,000 Miles (35,000 km) or at 42 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 24,000 Miles (40,000 km) or at 48 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 27,000 Miles (45,000 km) or at 54 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 30,000 Miles (50,000 km) or at 60 months

- Check fuel system for leaks ^{*1}
(tank, pipe line and connection, and fuel tank filler tube cap).**

^{*1} This maintenance is recommended but is not required to maintain the emissions warranty.

- Check fuel hoses condition. ^{*1}**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system ^{*1}
(connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Change manual transaxle oil.

- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● 33,000 Miles (55,000 km) or at 66 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 36,000 Miles (60,000 km) or at 72 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 39,000 Miles (65,000 km) or at 78 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 42,000 Miles (70,000 km) or at 84 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 45,000 Miles (75,000 km) or at 90 months

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Check transfer oil level.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● 48,000 Miles (80,000 km) or at 96 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 51,000 Miles (85,000 km) or at 102 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 54,000 Miles (90,000 km) or at 108 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 57,000 Miles (95,000 km) or at 114 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

- **60,000 Miles (100,000 km) or at 120 months**
 - Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
 - Check fuel hoses condition.**
 - Replace air cleaner filter.**
 - Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
 - Replace spark plugs, iridium-tipped type.**
 - Inspect and adjust intake and exhaust valve clearance. If valve noise increases, adjust valve clearance.***
 - * This maintenance is not "scheduled" service, should be done any time.
 - Replace drive belts (for the generator, water pump, power steering pump).**
 - Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
 - Change engine oil.
 - Change manual transaxle oil.
 - Change twin clutch sportronic shift transmission oil.
 - Replace twin clutch sportronic shift transmission oil filter.

- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Replace coolant hoses (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **63,000 Miles (105,000 km) or at 126 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **66,000 Miles (110,000 km) or at 132 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **69,000 Miles (115,000 km) or at 138 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **72,000 Miles (120,000 km) or at 144 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 75,000 Miles (125,000 km) or at 150 months

- Replace air cleaner filter.
- Change engine oil.
- Check manual transaxle oil level.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Check transfer oil level.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 78,000 Miles (130,000 km) or at 156 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 81,000 Miles (135,000 km) or at 162 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **84,000 Miles (140,000 km) or at 168 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **87,000 Miles (145,000 km) or at 174 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **90,000 Miles (150,000 km) or at 180 months**
- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Change engine coolant.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.

Regular maintenance schedule

- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● 93,000 Miles (155,000 km) or at 186 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 96,000 Miles (160,000 km) or at 192 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 99,000 Miles (165,000 km) or at 198 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **102,000 Miles (170,000 km) or at 204 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **105,000 Miles (175,000 km) or at 210 months**

- Replace air cleaner filter.**
- Change engine oil.
- Check manual transaxle oil level.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Check transfer oil level.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 108,000 Miles (180,000 km) or at 216 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 111,000 Miles (185,000 km) or at 222 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 114,000 Miles (190,000 km) or at 228 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 117,000 Miles (195,000 km) or at 234 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

- **120,000 Miles (200,000 km) or at 240 months**
- **Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- **Check fuel hoses condition.**
- **Replace air cleaner filter.**
- **Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
- **Replace spark plugs, iridium-tipped type.**
- **Inspect and adjust intake and exhaust valve clearance. If valve noise increases, adjust valve clearance.***
 - * This maintenance is not "scheduled" service, should be done any time.
- **Replace drive belts (for the generator, water pump, power steering pump).**
- **Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.
- Change transfer oil.

- Check reserve tank fluid level (for active center differential).
- Replace coolant hoses (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 123,000 Miles (205,000 km) or at 246 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 126,000 Miles (210,000 km) or at 252 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 129,000 Miles (215,000 km) or at 258 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 132,000 Miles (220,000 km) or at 264 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **135,000 Miles (225,000 km) or at 270 months**

- Replace air cleaner filter.**
- Change engine oil.
- Replace engine oil filter.
- Check manual transaxle oil level.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Check transfer oil level.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **138,000 Miles (230,000 km) or at 276 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **141,000 Miles (235,000 km) or at 282 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Regular maintenance schedule

Mileage or Time-Whichever occurs first

● 144,000 Miles (240,000 km) or at 288 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 147,000 Miles (245,000 km) or at 294 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 150,000 Miles (250,000 km) or at 300 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Change engine coolant.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.

- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 3,000 Miles (5,000 km) or at 3 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 6,000 Miles (10,000 km) or at 6 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 9,000 Miles (15,000 km) or at 9 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 12,000 Miles (20,000 km) or at 12 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **15,000 Miles (25,000 km) or at 15 months**

- Replace air cleaner filter.**
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **18,000 Miles (30,000 km) or at 18 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **21,000 Miles (35,000 km) or at 21 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 24,000 Miles (40,000 km) or at 24 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 27,000 Miles (45,000 km) or at 27 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 30,000 Miles (50,000 km) or at 30 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.

- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

- **33,000 Miles (55,000 km) or at 33 months**
- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **36,000 Miles (60,000 km) or at 36 months**
- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

- **39,000 Miles (65,000 km) or at 39 months**
- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 42,000 Miles (70,000 km) or at 42 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 45,000 Miles (75,000 km) or at 45 months

- Replace air cleaner filter.**
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **48,000 Miles (80,000 km) or at 48 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **51,000 Miles (85,000 km) or at 51 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **54,000 Miles (90,000 km) or at 54 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **57,000 Miles (95,000 km) or at 57 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

- **60,000 Miles (100,000 km) or at 60 months**
- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
- Replace spark plugs, iridium-tipped type.**
- Inspect and adjust intake and exhaust valve clearance. If valve noise increases, adjust valve clearance.***
- * This maintenance is not "scheduled" service, should be done any time.
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.

- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Replace coolant hoses (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **63,000 Miles (105,000 km) or at 63 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **66,000 Miles (110,000 km) or at 66 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **69,000 Miles (115,000 km) or at 69 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **72,000 Miles (120,000 km) or at 72 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 75,000 Miles (125,000 km) or at 75 months

- Replace air cleaner filter.**
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 78,000 Miles (130,000 km) or at 78 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 81,000 Miles (135,000 km) or at 81 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **84,000 Miles (140,000 km) or at 84 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **87,000 Miles (145,000 km) or at 87 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **90,000 Miles (150,000 km) or at 90 months**

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- Check fuel hoses condition.**
- Replace air cleaner filter.**
- Replace drive belts (for the generator, water pump, power steering pump).**
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Change engine coolant.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.

Severe maintenance schedule

- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● 93,000 Miles (155,000 km) or at 93 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 96,000 Miles (160,000 km) or at 96 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 99,000 Miles (165,000 km) or at 99 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **102,000 Miles (170,000 km) or at 102 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **105,000 Miles (175,000 km) or at 105 months**

- Replace air cleaner filter.**
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 108,000 Miles (180,000 km) or at 108 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 111,000 Miles (185,000 km) or at 111 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 114,000 Miles (190,000 km) or at 114 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 117,000 Miles (195,000 km) or at 117 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

- **120,000 Miles (200,000 km) or at 120 months**
- **Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).**
- **Check fuel hoses condition.**
- **Replace air cleaner filter.**
- **Check evaporative emission control system for leaks and clogging (except evaporative emission canister).**
- **Replace spark plugs, iridium-tipped type.**
- **Inspect and adjust intake and exhaust valve clearance. If valve noise increases, adjust valve clearance.***
 - * This maintenance is not “scheduled” service, should be done any time.
- **Replace drive belts (for the generator, water pump, power steering pump).**
- **Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).**
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.
- Change transfer oil.

- Check reserve tank fluid level (for active center differential).
- Replace coolant hoses (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 123,000 Miles (205,000 km) or at 123 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 126,000 Miles (210,000 km) or at 126 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 129,000 Miles (215,000 km) or at 129 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 132,000 Miles (220,000 km) or at 132 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Mileage or Time-Whichever occurs first

● **135,000 Miles (225,000 km) or at 135 months**

- Replace air cleaner filter.**
- Change engine oil.
- Change manual transaxle oil.
- Check twin clutch sportronic shift transmission oil for evidence of leaks (if necessary, check the oil level).
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **138,000 Miles (230,000 km) or at 138 months**

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● **141,000 Miles (235,000 km) or at 141 months**

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

Severe maintenance schedule

Mileage or Time-Whichever occurs first

● 144,000 Miles (240,000 km) or at 144 months

- Change engine oil.
- Replace engine oil filter.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 147,000 Miles (245,000 km) or at 147 months

- Change engine oil.
- Inspect disc brake pads and rotors for wear.
- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Rotate tires.
- Inspect air purifier filter for clogging.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #

● 150,000 Miles (250,000 km) or at 150 months

- Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap).
- Check fuel hoses condition.
- Replace air cleaner filter.
- Replace drive belts (for the generator, water pump, power steering pump).
- Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields).
- Change engine oil.
- Replace engine oil filter.
- Change manual transaxle oil.
- Change twin clutch sportronic shift transmission oil.
- Replace twin clutch sportronic shift transmission oil filter.
- Change transfer oil.
- Check reserve tank fluid level (for active center differential).
- Change engine coolant.
- Inspect coolant hoses condition (radiator hose, heater hose).
- Inspect disc brake pads and rotors for wear.
- Check brake hoses for deterioration or leaks.
- Inspect ball joint and steering linkage seals for grease leaks and damage.

- Inspect suspension system for looseness and damage.
- Inspect drive shaft boots for grease leaks and damage.
- Change rear axle oil (differential part and torque transfer part).
- Change rear axle oil, with Limited Slip Diff.
- Rotate tires.
- Replace air purifier filter.

MILEAGE/ MONTHS	DEALERSHIP NAME/CODE	DATE	REPAIR ORDER #



DIAMOND CARESM PROTECTION PLAN

Have you purchased the Mitsubishi Diamond Care Protection Plan? The Plan supplements your new vehicle warranties. See your authorized Mitsubishi dealer for details.

OWNER INFORMATION

OWNER'S NAME		
ADDRESS		
CITY	STATE	ZIP

VEHICLE / DEALER INFORMATION

VEHICLE IDENTIFICATION NUMBER																
WARRANTY START (IN-SERVICE) DATE								MILEAGE AT START OF WARRANTY								
SELLING DEALER NAME												DEALER CODE				
ADDRESS																
CITY						STATE						ZIP				

DIAMOND CARE PROTECTION PLAN INFORMATION (IF APPLICABLE)

POLICY NUMBER										EXPIRATION DATE						
MONTHS OF COVERAGE										EXPIRATION MILEAGE						

IMPORTANT NOTICE TO OWNER

PLEASE PRESENT THIS BOOKLET TO ANY AUTHORIZED MITSUBISHI MOTORS DEALER OR AUTHORIZED SERVICE CENTER FOR WARRANTY SERVICE ON THE ABOVE LISTED VEHICLE.



© Copyright 2011 Mitsubishi Motors North America, Inc.