



SECURITY CODE INPUT & ENTRY



The procedure for inputting the security code is consistent for all Mitsubishi radios, except for step 4. Read step 4 prior to beginning code input to determine which button to press to complete the procedure. You have approximately 3 minutes to complete each attempt.


* STEP 1 *

Turn the ignition key to the ACC or ON position.

* STEP 2 *

Ensure the radio is ON ("codE" should be displayed).

NOTE: If you do not see "codE" displayed on the radio, the radio may not require a security code. If you see a radio frequency displayed and the radio does not play, it may require repair or replacement. Contact an authorized Mitsubishi Motors dealer for assistance.




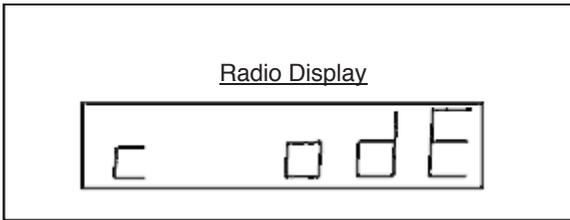


* STEP 3 *

Radio station preset buttons


Using radio station preset buttons 1 through 4, input the security code as follows:
(For this example, the security code is 0364).

- Press the number 1 preset button repeatedly until the first number of the code (0) is displayed (if you pass the desired number, keep pressing the button. The number sequence restarts after 9).
- Repeat the previous step with the number 2 preset button until you see the second digit (3) of the code.
- Repeat these instructions for the third (6) and fourth (4) digits of the code.
- Confirm the numbers displayed on the radio (0364) match the security code you obtained.

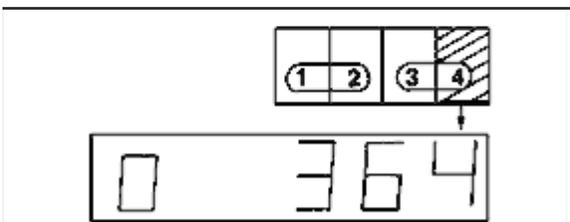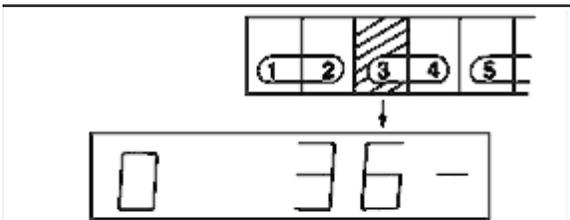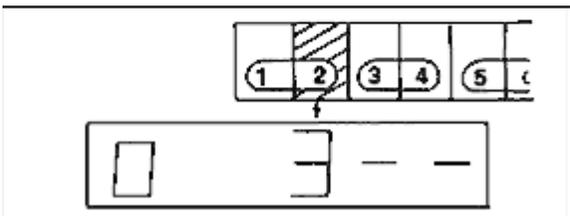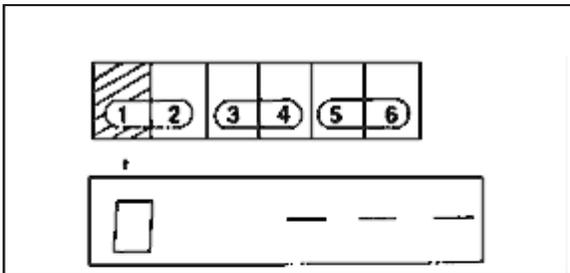


NOTE: Take your time. You get three chances to enter the code correctly. After the third incorrect attempt, the radio will display "OFF" and not accept codes until a reset procedure is completed.

* **STEP 4** *

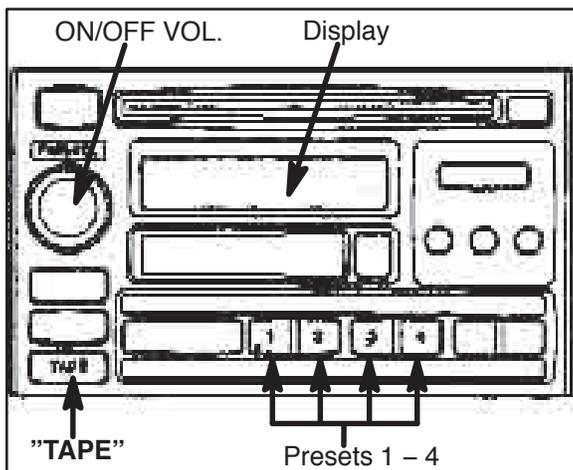


To activate the security code, you must press the correct button depending on your radio. With the desired security code displayed:


a. If you have a double-sized radio with both "CD" and "TAPE" functions, press the "TAPE" button.

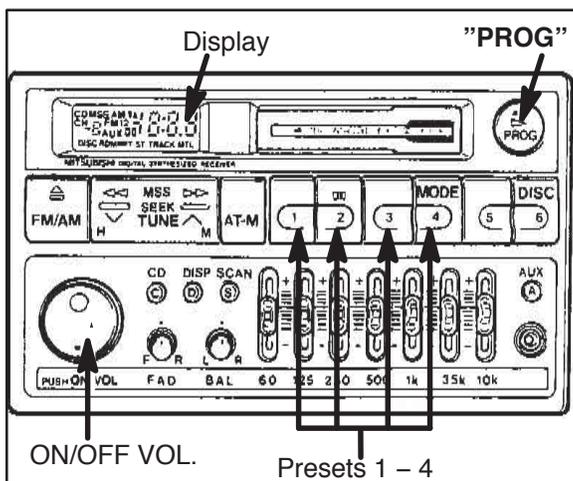

b. If you have a double-sized radio with a large button labelled "PROG," press that button.

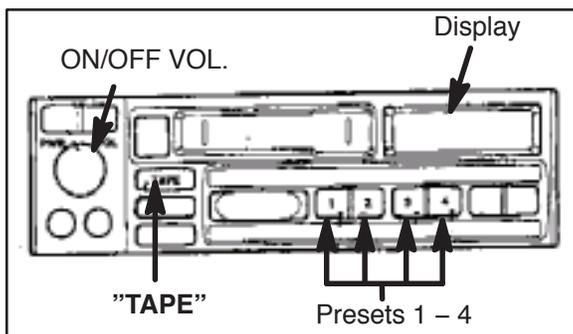

c. If you have a single or double-sized radio with a cassette tape player (no CD), press the "TAPE" button.

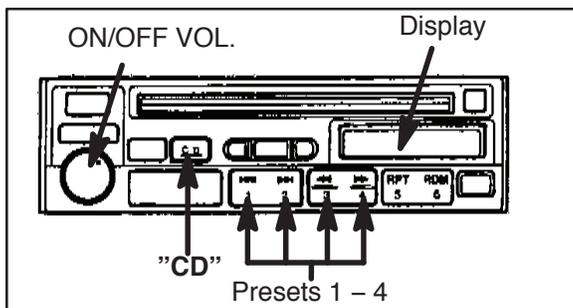


d. If you have a single or double-sized radio with a CD player (no TAPE), press the "CD" button.


(1) If the code is correctly entered, a beep is heard, a radio station frequency (e.g 530) is displayed, and you hear music or static from the speakers.

(2) If the code is incorrectly entered, "1 Err" is displayed, indicating you have made an incorrect entry. In a few seconds, "codE" will be displayed again.

(3) The second incorrect entry will return "2 Err" and the third, "3 Err." After "3 Err" is displayed, the display changes to "oFF" and code input is not accepted until the radio is reset.

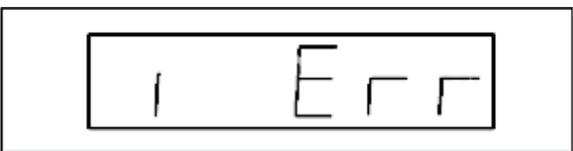

*** STEP 5 (FINAL STEP) ***

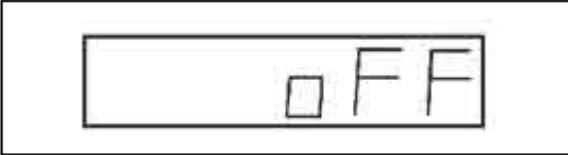

To reset the radio to "codE", the ignition must be in the "ACC" or "ON" position (the vehicle may be driven) and the radio must be ON with "OFF" displayed for approximately one hour. When the display returns to "codE," you have another 3 attempts to enter the correct code.

NOTE:

If the radio displays any error code after the code was correctly input, please fill out the Radio Code Trouble Form at the links below.

For owners:

<http://www.mitsubishicars.com/MMNA/jsp/owners-site/radiocode-trouble-form.do>

For Business:

<http://www.mitsubishicars.com/MMNA/jsp/business/radiocode-trouble-form.do>